



0199


Position ID	Spare part no.	Replacement	Description
0102	00645263	00658327	Power supply unit
0103	00645387	00654880	Display module
0109	00645127		Cable
0110	00668071		Rail
0120	00700037	00706394	Panel frame
0121	00668515		Sealing
0122	00645268		Worktop
0130	00645269		Handle
0199	00341313	00342189	Auxiliary tool
0199	00341333		Plexiglass door
8001	00460038	00311506	Descaler
8302	00380991		Instruction manual
8352	00549419		Brief description
8400	00543121		Installation instructions
8401	00565535		Supplemental
0199	00687013	12012342	Repair set-condensate
0199	00708086		Rail
0199	00687970	00685271	Cutlery drawer

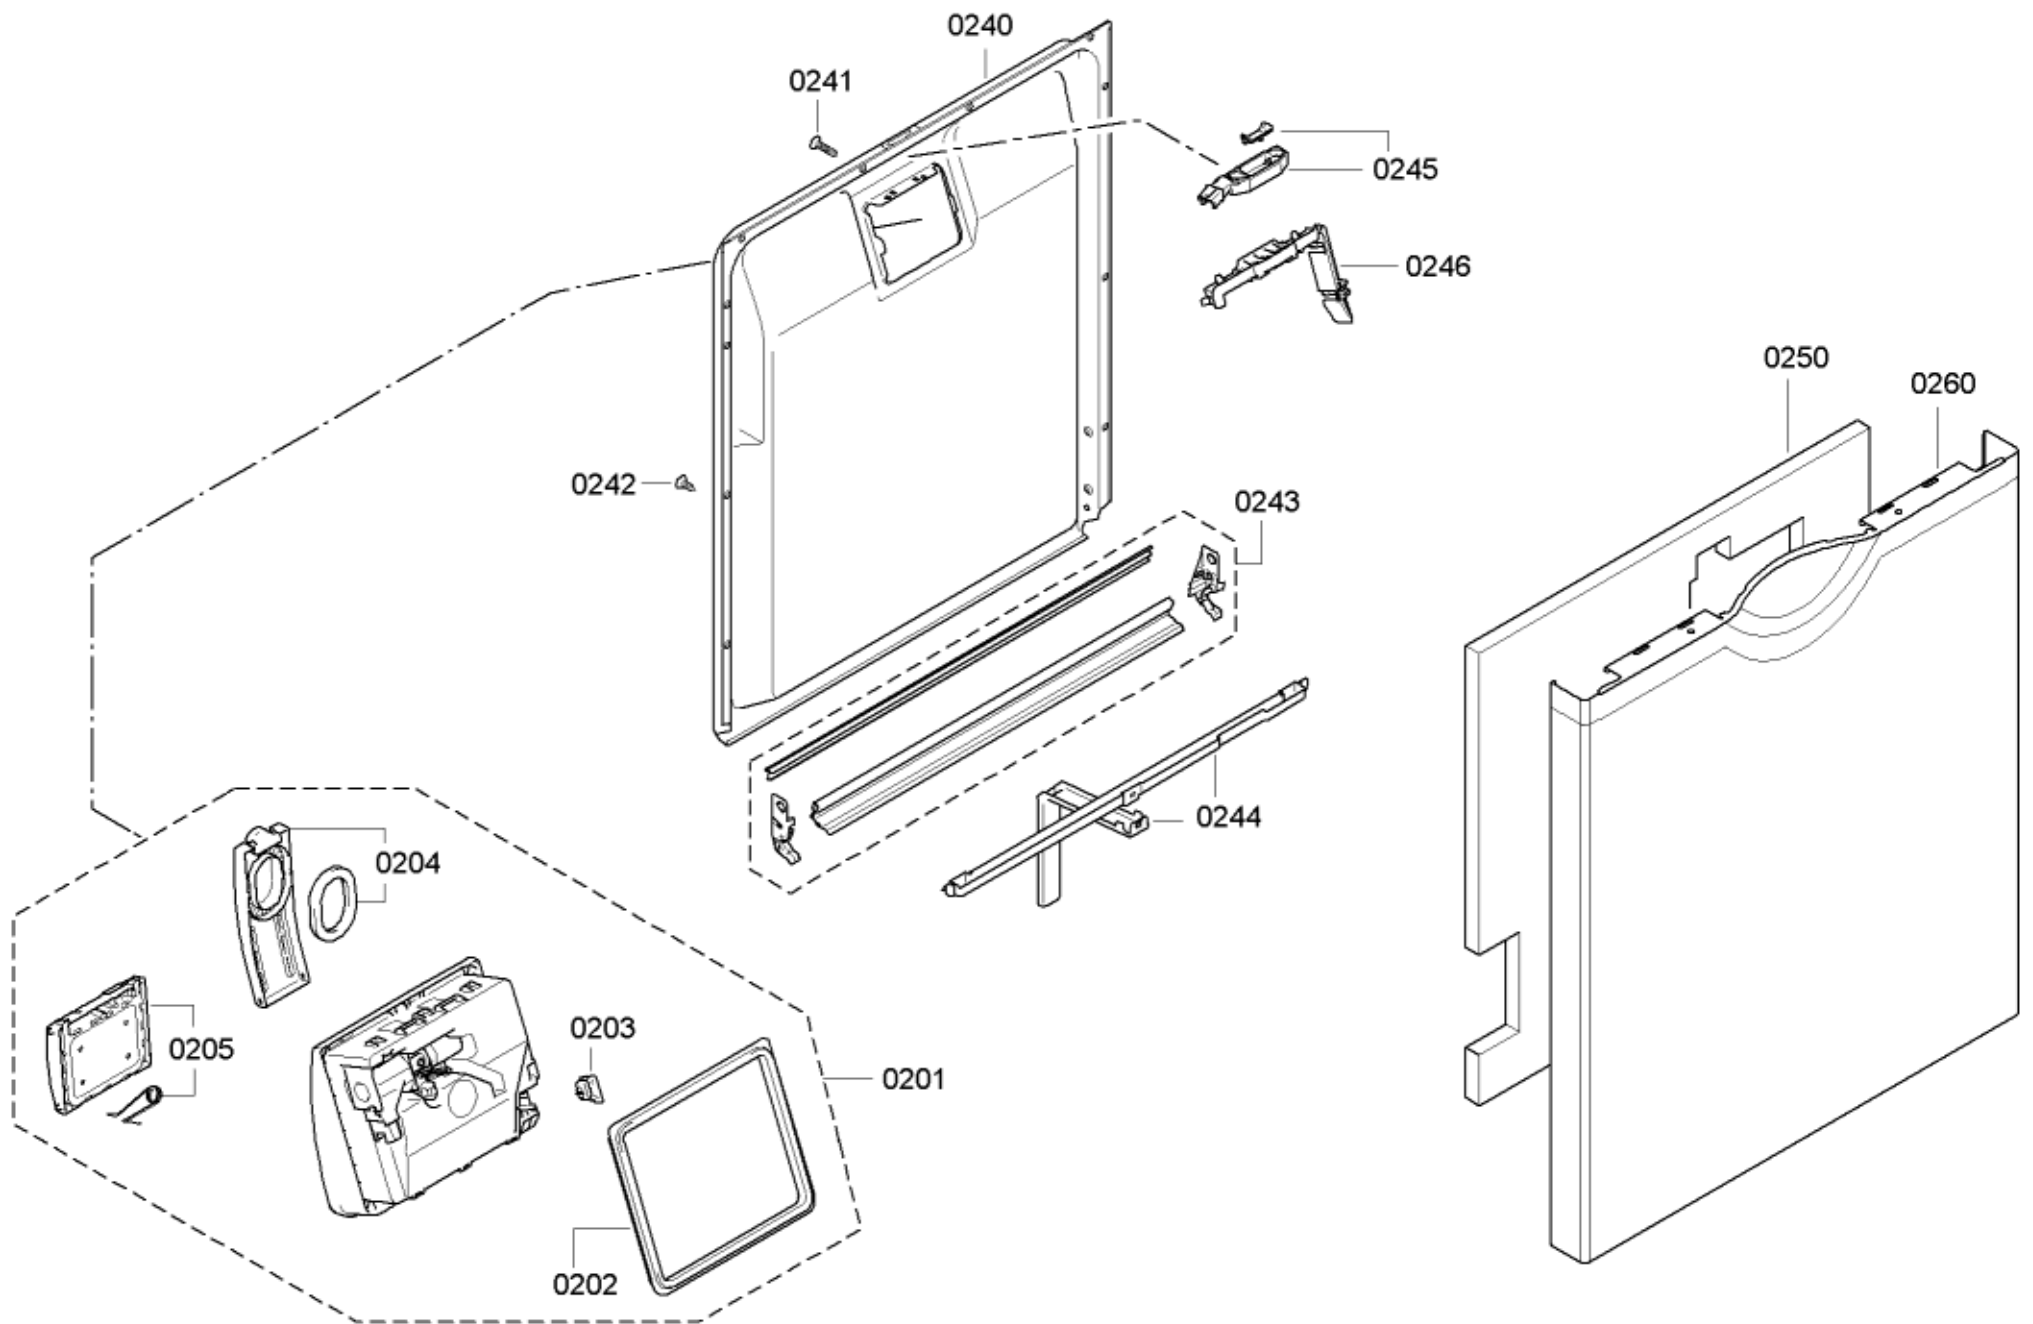

Position ID	Spare part no.	Replacement	Description
0201	00645026		Dispenser
0202	00645144		Sealing
0203	00611574		Sensor
0204	00611575		Lid
0205	00611576		Lid
0240	00680311		Door-inner
0241	00611311		Screw
0242	00151703		Screw
0243	00668079		Seal-door
0244	00668081		Overflow
0245	00611312		Sensor
0250	00680312		Insulating plate
0260	00680591		Door-outer
8001	00460038	00311506	Descaler
8302	00380991		Instruction manual
8352	00549419		Brief description
8400	00543121		Installation instructions
8401	00565535		Supplemental

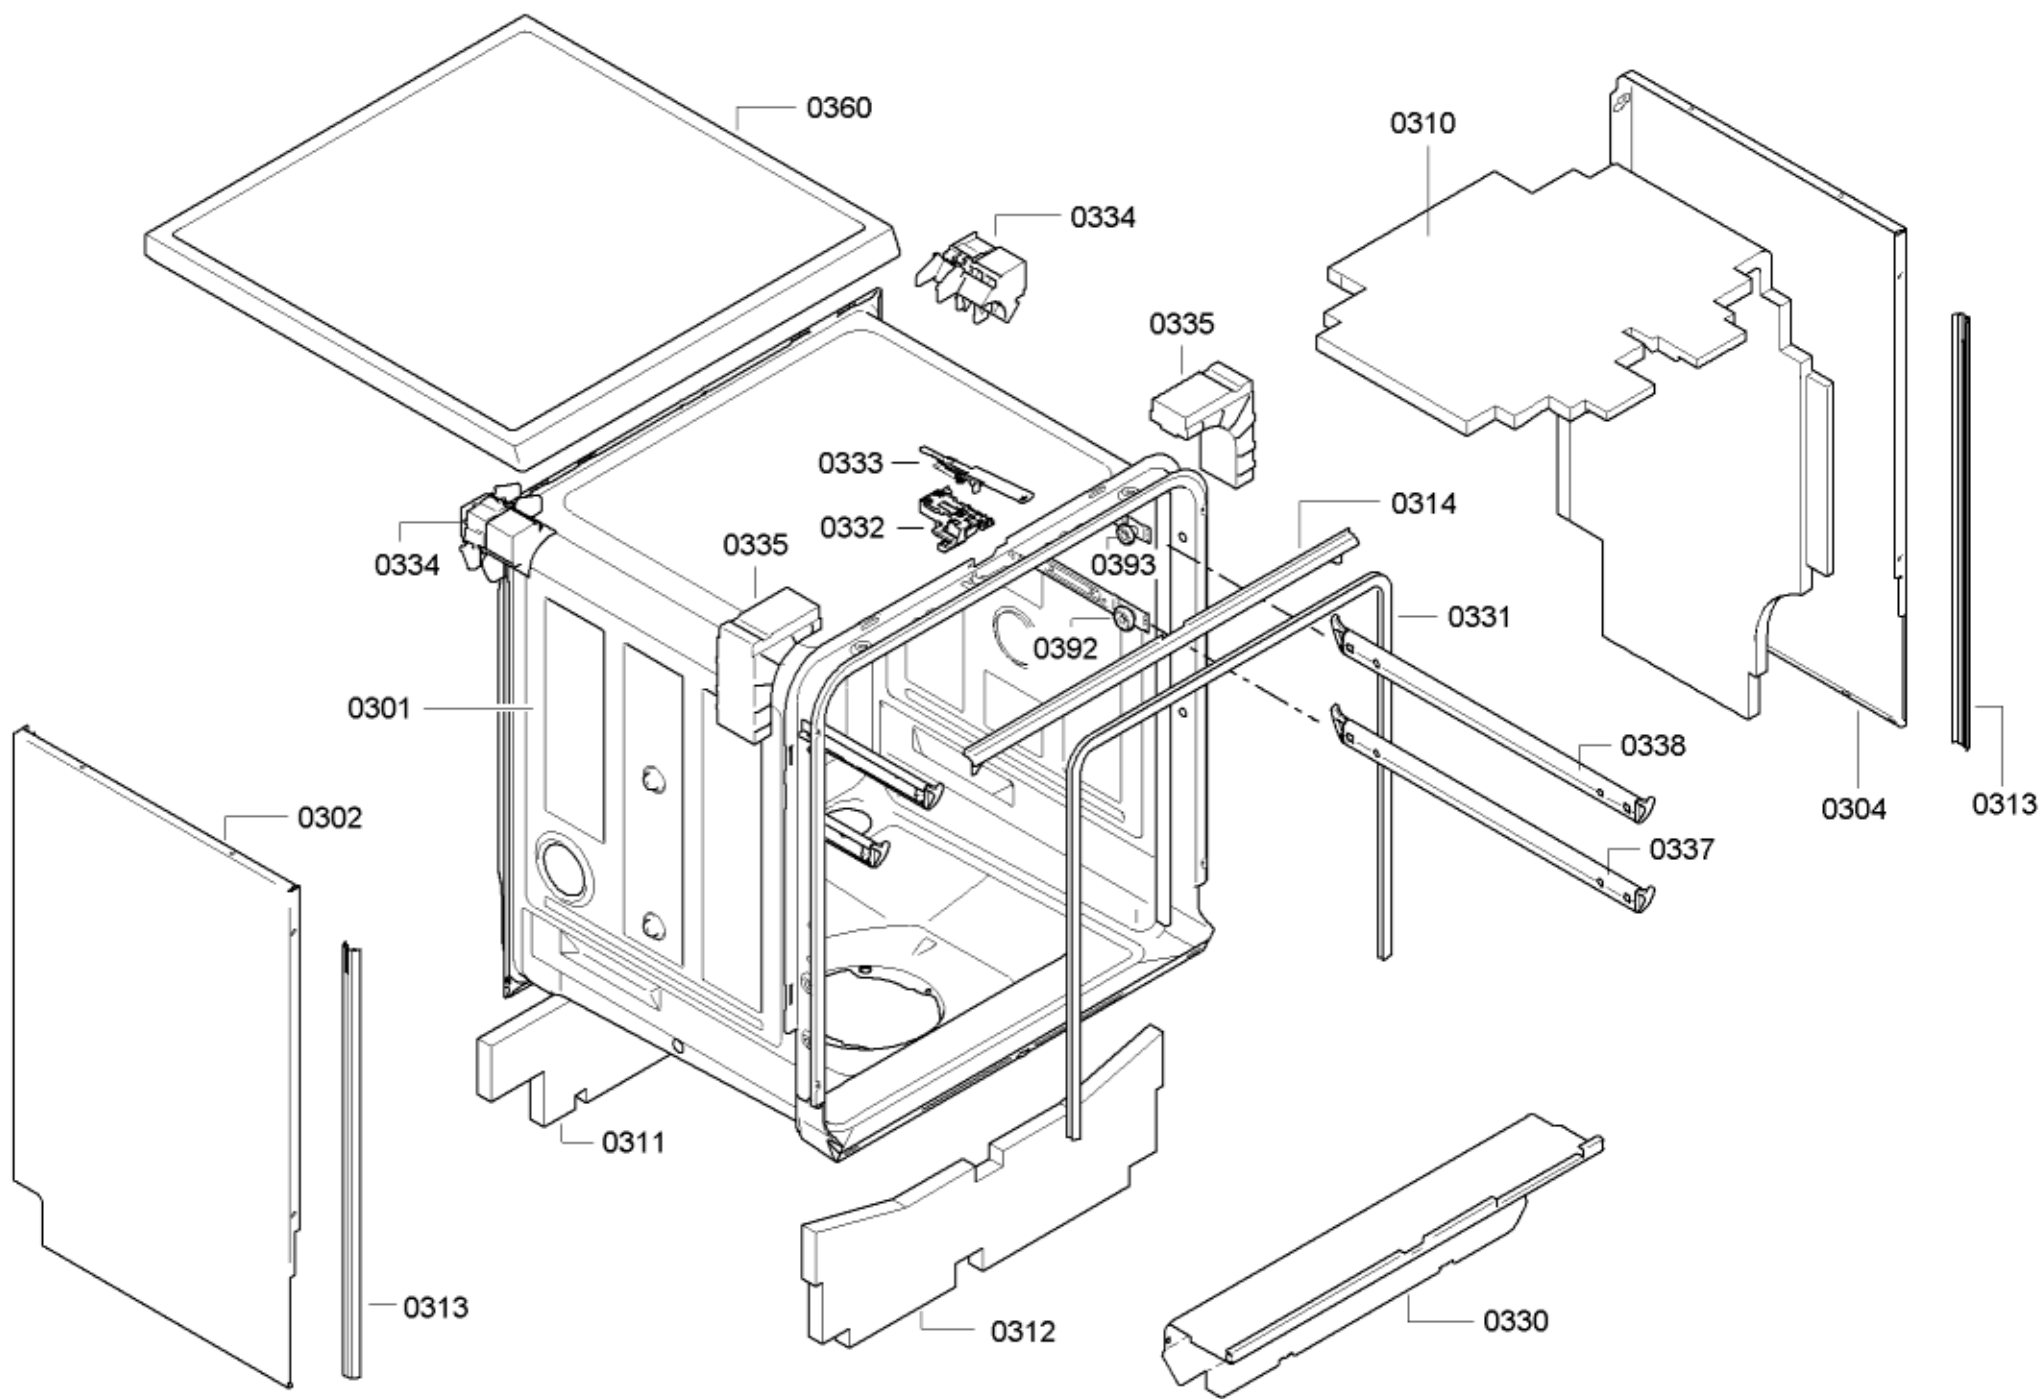


Position ID	Spare part no.	Replacement	Description
0302	00682535	00685952	Panel side
0304	00682536	00685953	Panel side
0310	00680316	00680915	Insulating plate
0311	00668082		Insulating plate
0312	00668083		Insulating plate
0313	00668094		Strip
0314	00668095		Strip
0330	00668096		Base
0331	00263096		Seal-door
0332	00644989	00636708	Lock
0333	00644990		Child-protection
0334	00611313		Holder
0335	00611572		Holder
0337	00668097		Rail
0338	00668719		Rail
0360	00682467		Desk top
0392	00169467	00622193	Repair set-role
8001	00460038	00311506	Descaler
8302	00380991		Instruction manual
8352	00549419		Brief description
8400	00543121		Installation instructions
8401	00565535		Supplemental

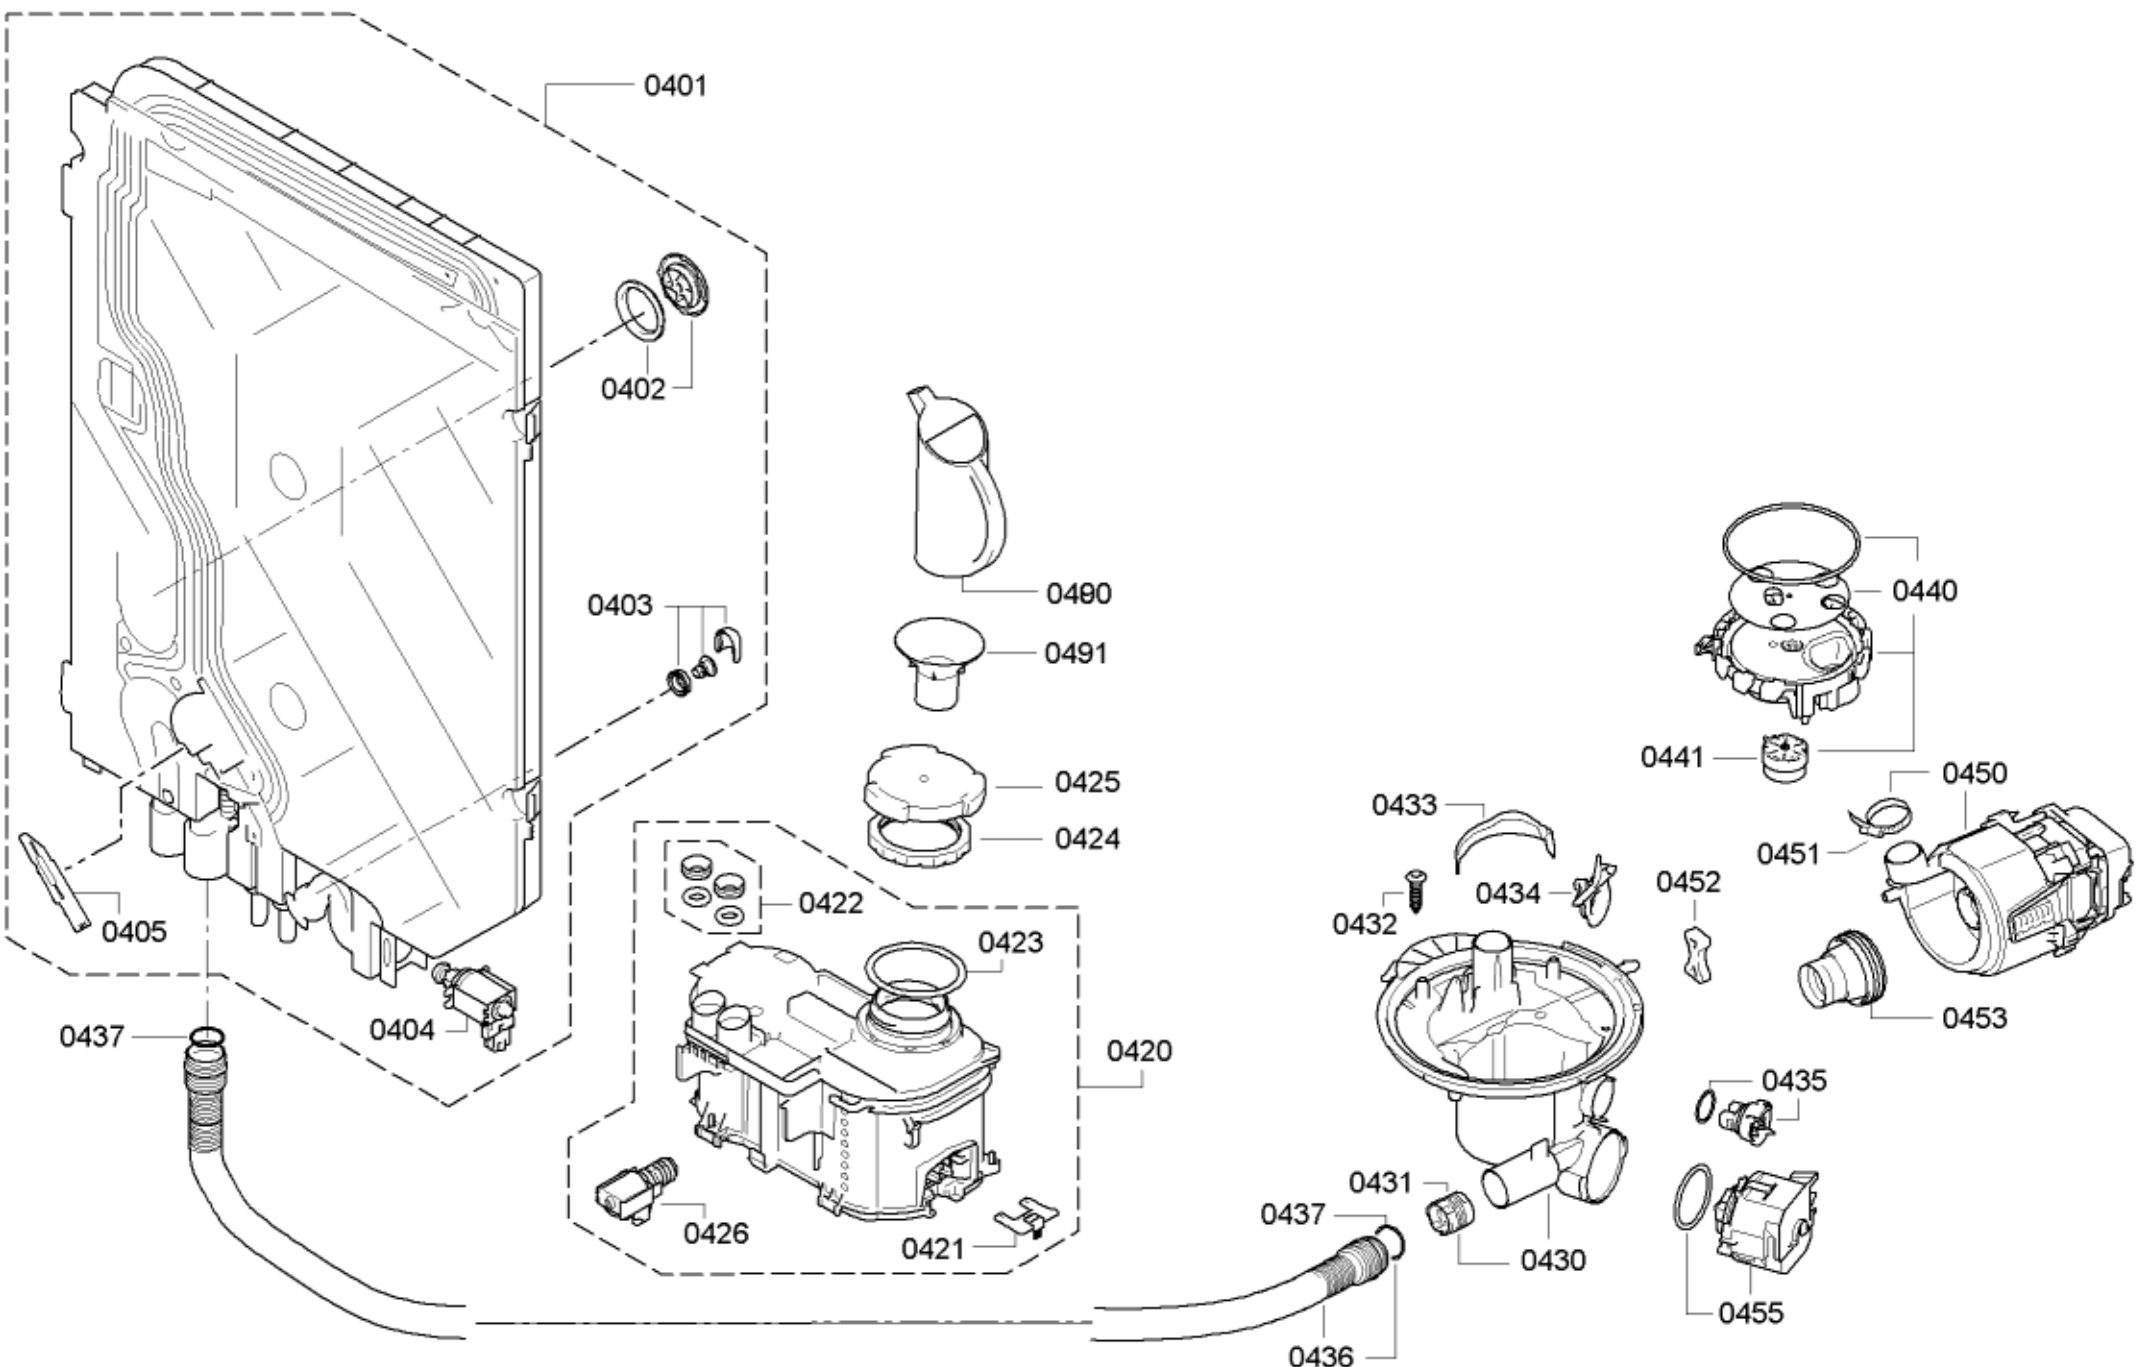


Position ID	Spare part no.	Replacement	Description
0401	00680319		Heat exchanger
0402	00611314		Cover
0403	00611315	00622267	Thread bolt
0404	00611316		Valve-outlet
0405	00611317		Contact
0420	00645025	00754350	Water softener
0421	00611912		Sensor
0422	00611913		Sealing
0423	00611915		Sealing
0424	00611318		Nut
0425	00611319		Lid
0426	00611916		Valve-regeneration
0431	00611320		Valve-non return
0432	00167241		Screw
0433	00611321		Cover
0434	00611322		Lid
0435	00611323		Sensor
0436	00668104		Hose
0437	00611324		Sealing
0440	00644996		Altern.water distributor
0441	00611329		Water switch motor
0450	00644997	00654575	Heat pump
0451	00172272		Hose clamp
0452	00611330		Suspension
0453	00611331		Sealing
0455	00611332		Pump-drain
0490	00552829		Part not included in this appliance

0491	00645000		Funnel
8001	00460038	00311506	Descaler
8302	00380991		Instruction manual
8352	00549419		Brief description
8400	00543121		Installation instructions
8401	00565535		Supplemental

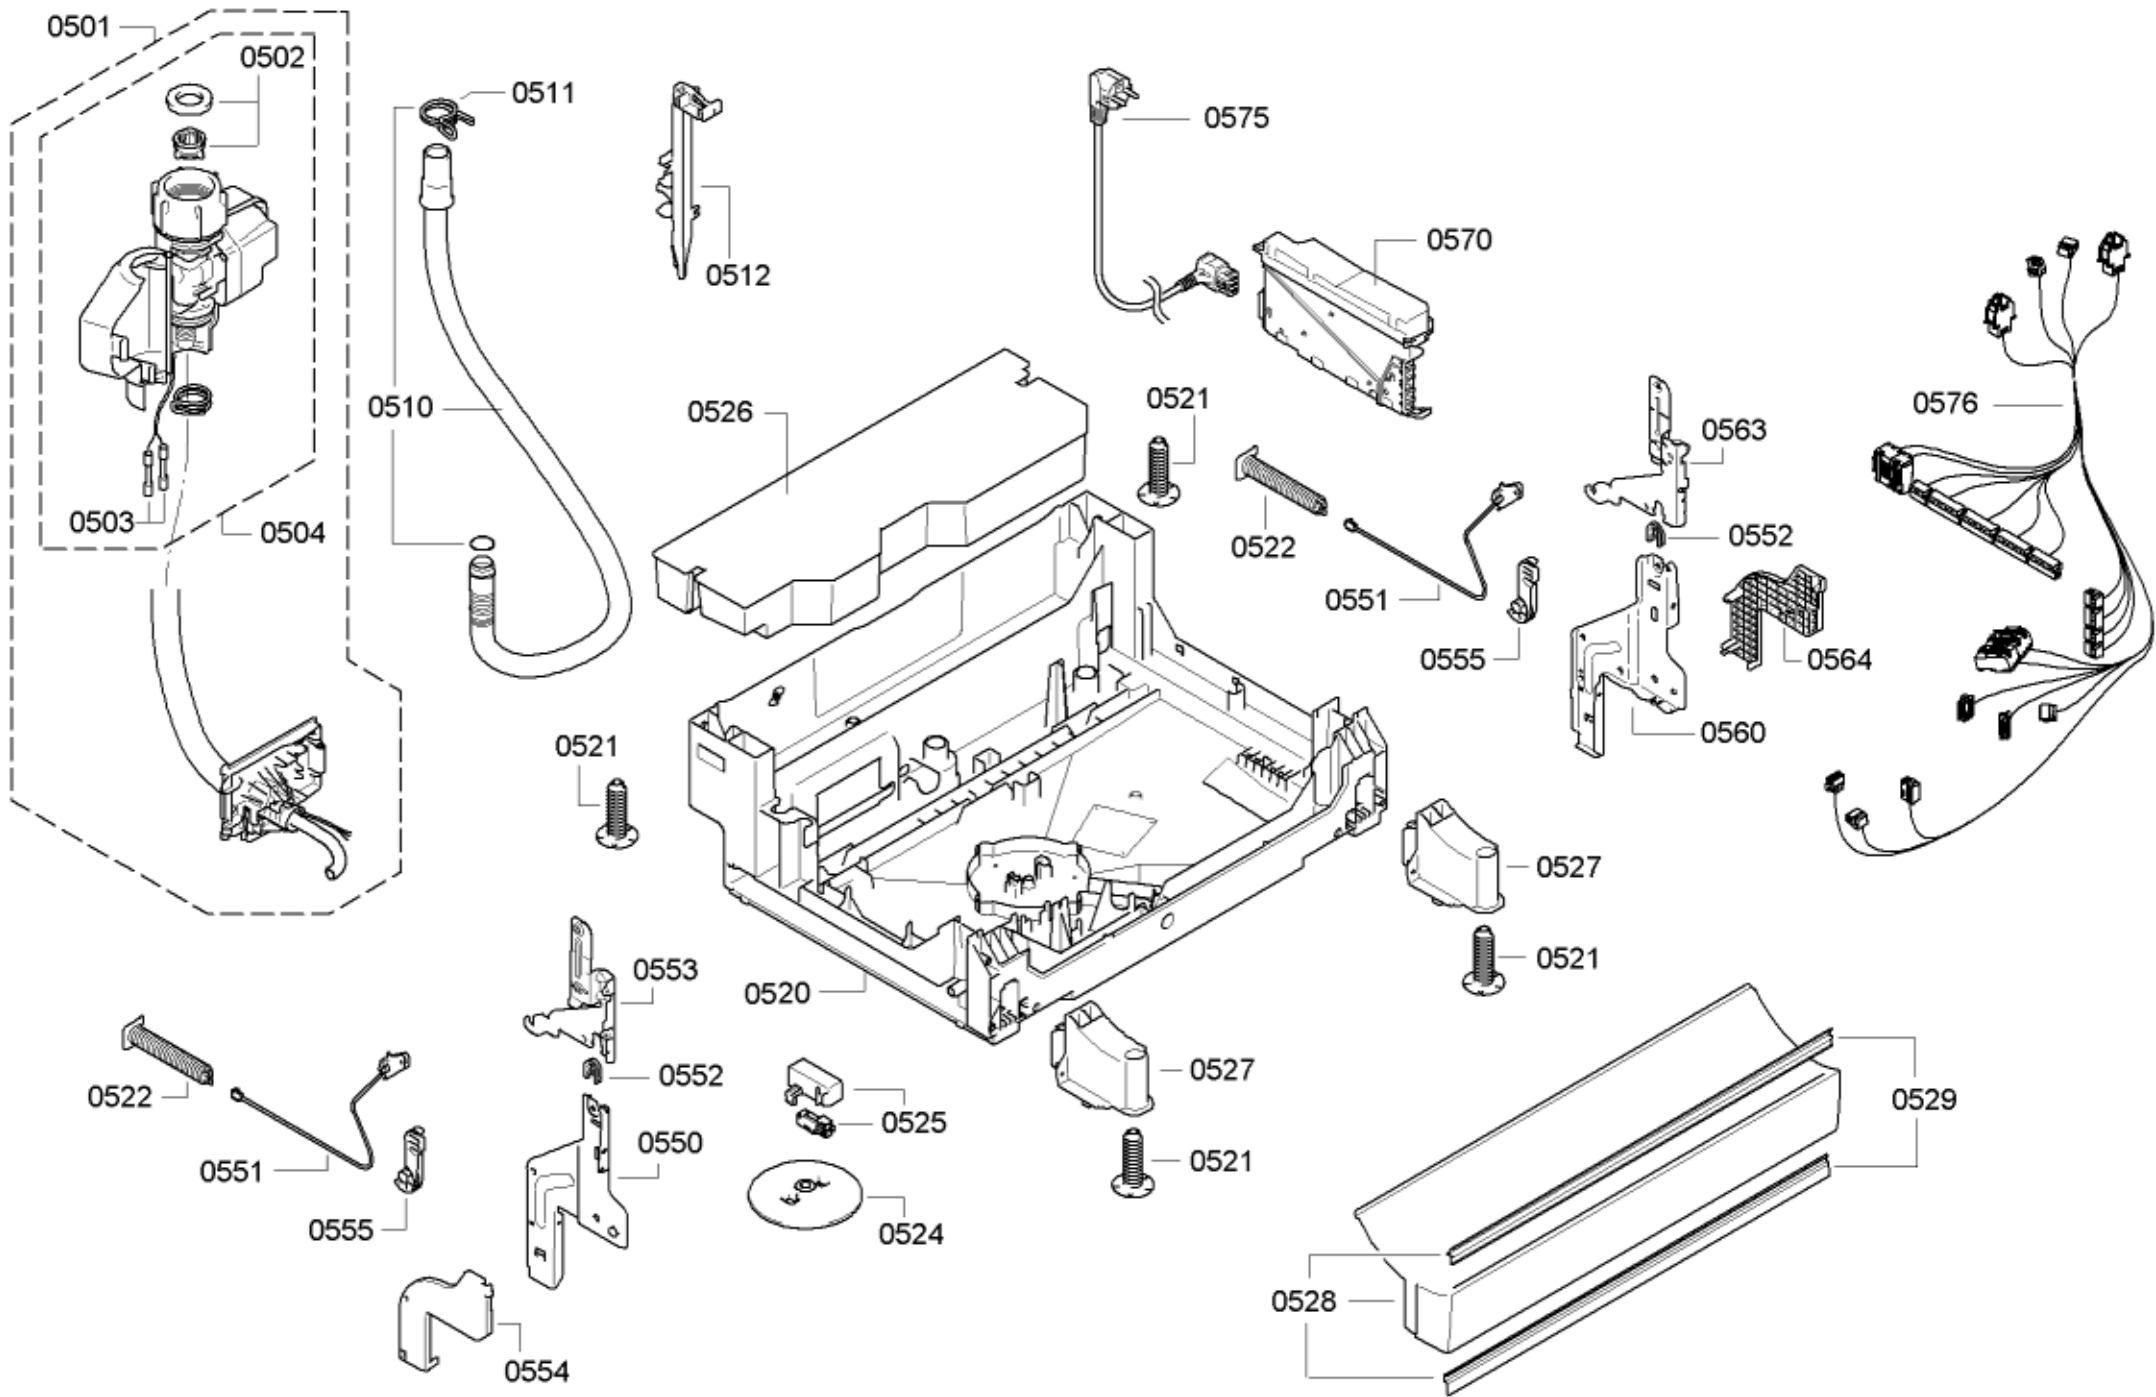

Position ID	Spare part no.	Replacement	Description
0501	00668113		Aquastop
0501	00673684		Extension
0502	00166671		Sealing
0503	00067776		Cable connector
0504	00645701		Valve-aquastop
0510	00668114		Drain hose
0511	00417499		Hose clamp
0512	00644991		Holder
0520	00680323	00771847	Case-bottom
0521	00609843		Foot
0522	00611335		Spring
0524	00611341	00622039	Switch
0525	00611343	00622039	Switch
0526	00144854		Weight
0527	00611344		Support
0528	00668118		Panel-base
0529	00611345		Sealing
0550	00668137	00706435	Hinge-plate
0551	00611370		Rope
0552	00165296		Bearing
0553	00645027	12005776	Hinge
0554	00611371		Cover
0555	00611372	00623536	Guide
0560	00668138	00706436	Hinge-plate
0563	00645029	12005775	Hinge
0564	00611373		Cover
0570	00647386		Power module not programmed

0570	00650931		Control module programmed
0575	00645810	12005926	Power cord
0576	00645126		Cable harness
8001	00460038	00311506	Descaler
8302	00380991		Instruction manual
8352	00549419		Brief description
8400	00543121		Installation instructions
8401	00565535		Supplemental

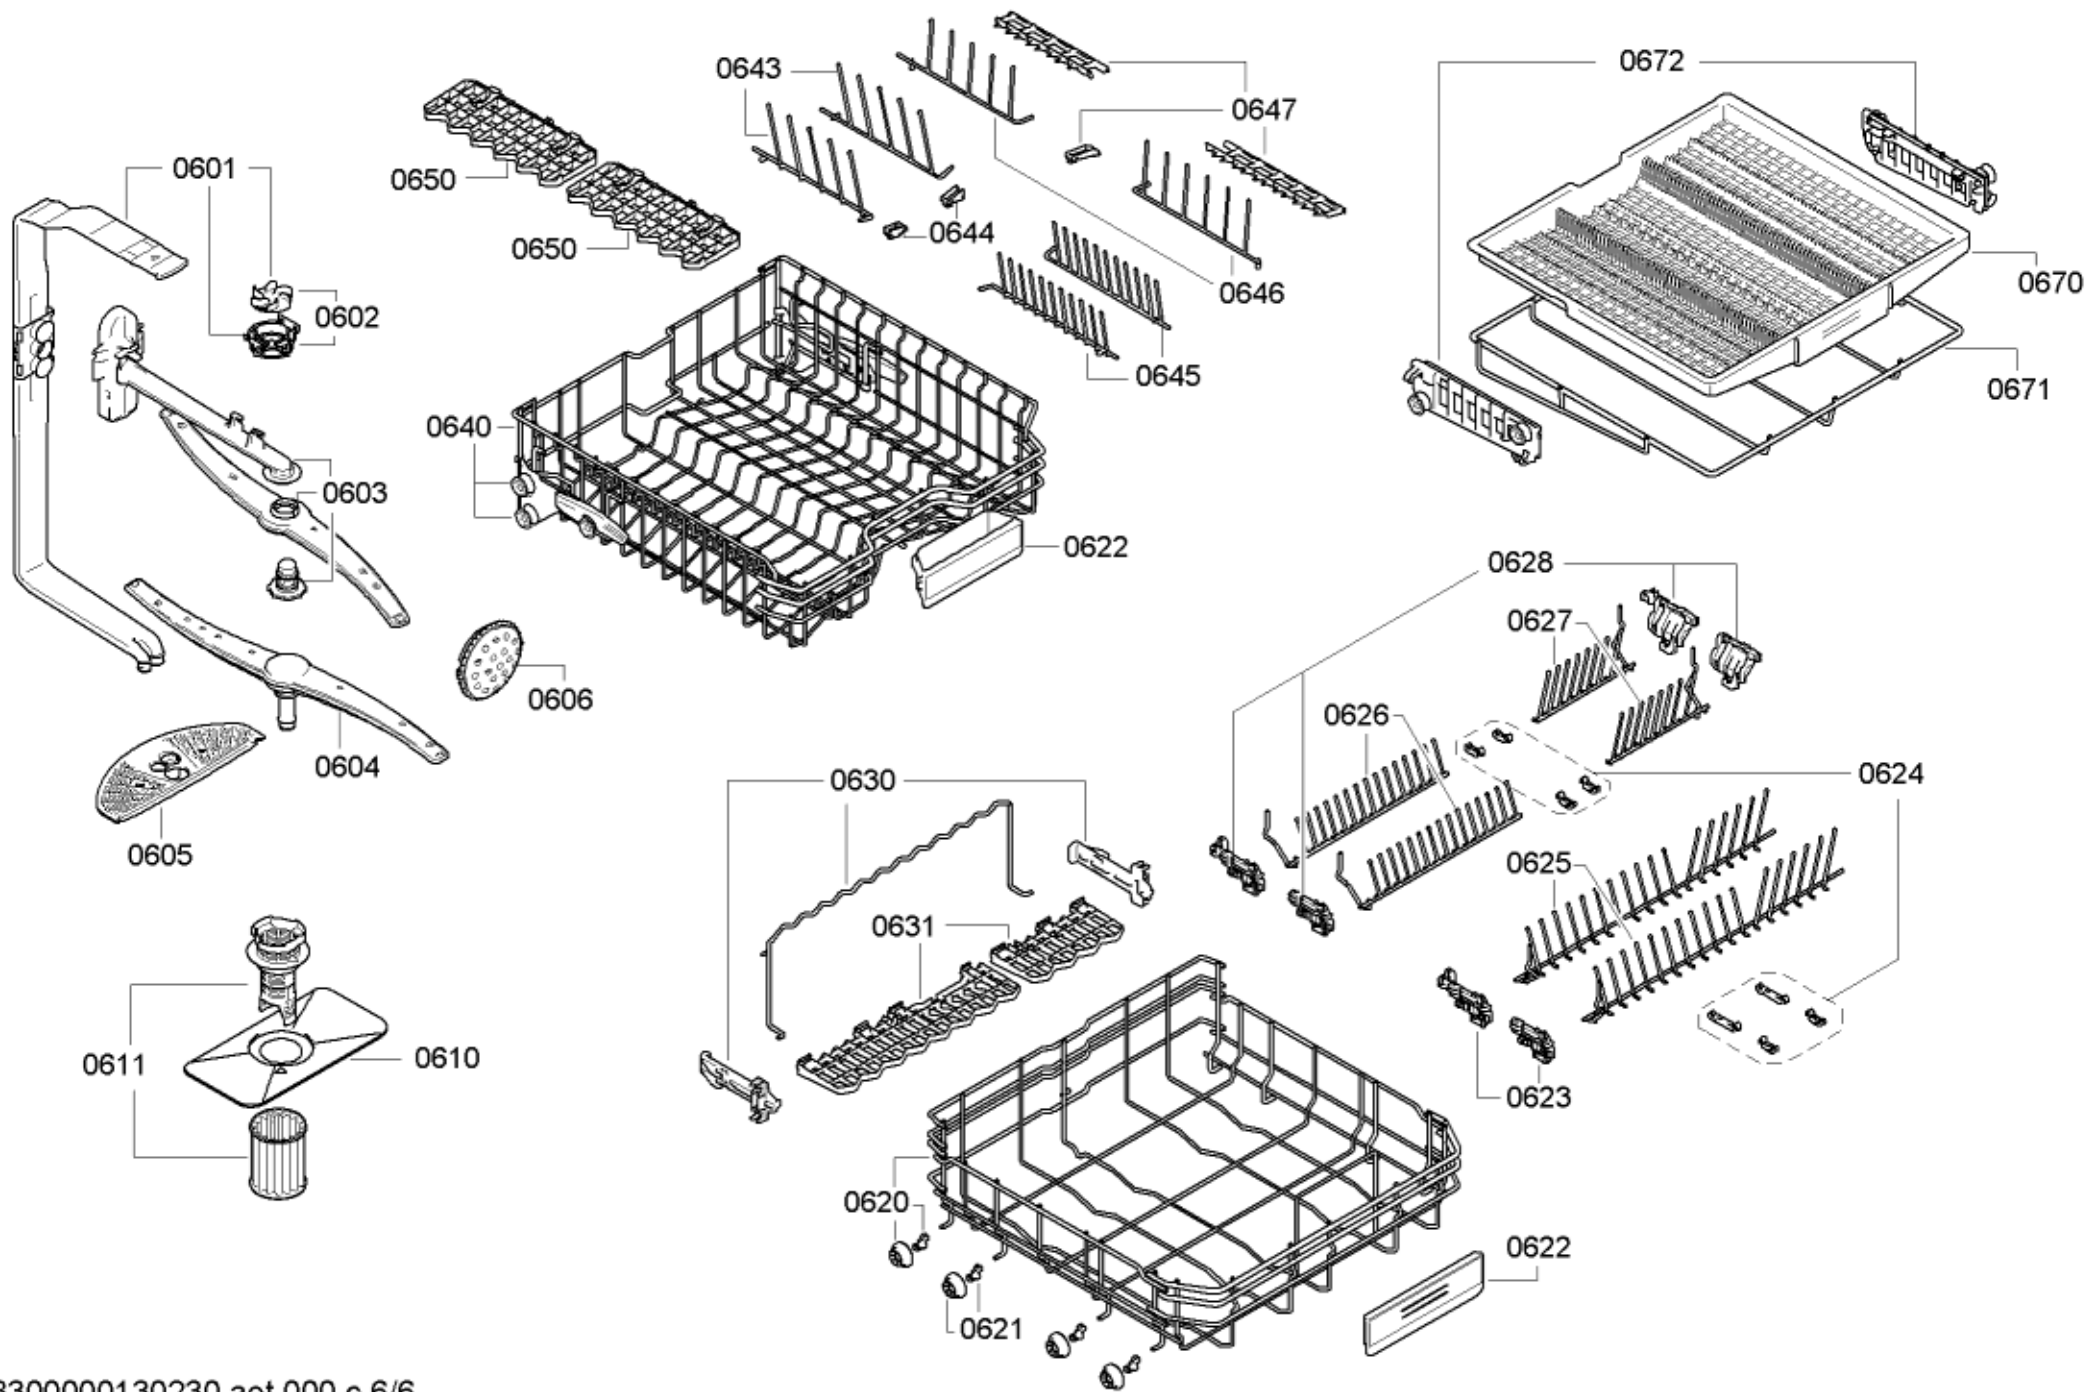

Position ID	Spare part no.	Replacement	Description
0601	00668143	11003118	Tube
0602	00611388		Shower
0603	00668147	11012631	Spray arm
0604	00668148		Spray arm
0605	00645036		Cover
0606	00612114		Spray head
0610	00645037		Filter-fine
0611	00645038		Filter-micro
0620	00680381	00771609	Crockery basket
0621	00611475		Wheel
0622	00616395		Handle
0623	00611482		Bearing
0624	00611472		Clip
0625	00645108		Insert
0626	00645101		Insert
0627	00645102		Insert
0628	00611473		Bearing
0630	00668281		Insert
0631	00645109		Cup rack
0640	00680383	00771812	Crockery basket
0643	00645110	12004141	Insert
0644	00611474		Clip
0645	00645104	12004140	Insert
0646	00645111		Insert
0647	00645112		Strip
0650	00645105		Cup rack
0671	00685184		Frame

0672	00619598		Holder
8001	00460038	00311506	Descaler
8302	00380991		Instruction manual
8352	00549419		Brief description
8400	00543121		Installation instructions
8401	00565535		Supplemental
0670	00685187		Cutlery drawer