

4) Presently available error codes for the SKYLANDER models range

<i>Cuore NFC electric module</i>	
ERROR CODE	MOST PROBABLE REASON FOR THE ERROR CODE
E03	Tank is full of water and has to be emptied.
E05	Front NTC sensor is either short circuit or open circuit. Check front NTC sensor and/or wiring.
E07	Alarm, filter occluded, This error can only appear after the end of a cycle. The filter is occluded because of fluff presence, the correct ventilation is not allowed. Clean the filter.
E08	Thermo fuse intervention. Replace the thermo fuse and check that ventilation circuit is clean, check the wiring.
E10	Missing communication between "Cuore" Electric Module and Display Electric Module and/or Wiring.
E11	In the rear part of condenser the temperature is too high. Check that all ventilation ducts are clean, check that ventilation system is working well. Check the condenser, the motor, the fan could be broke/blocked.
E12	Pressure switch doesn't work. Check the pressure switch and/or wiring. Check that the air trap is clean.
E13	Compressor NTC Probe is either Short Circuit or Open Circuit. Check the compressor NTC probe and/or wiring.
E14	Rear NTC Probe is either Short Circuit or Open Circuit. Check the rear NTC probe and/or wiring.
E15	Main board not programmed. Program the main board.
E19	It is not possible to use NFC tag for any actions until the next POWER ON/OFF. (switch off and switch on)
E21	Heater control relay on the "cuore" electric module is not working. High temperature has been reached - Thermo Fuse worked. Check the thermo Fuse, and the wiring. Check that both the ventilation circuit and ventilation ducts are clean and duct is not obstructed. Replace the "cuore" electric module only in the case that the heater command relay is faulty.
E22	Compressor control relay on the "cuore" electric module is not working. Check the compressor and compressor wiring/connections. Replace the "cuore" electric module only in the case that the compressor command relay is faulty.