





E74

E74: NTC sensor wrongly positioned

E74

Checks to perform:

Check that all the connectors are inserted correctly

