


Gebrauchsanweisung
 58 5467
 (en)
 Kochbuch
 58 5154
 (en)

- 1) 17 0995
- 2) 43 2242
- 3) 43 2243
- 4) 15 4742
- 5) 02 3742


Zubehör:

Dampfgarer
 N8640X2


- Backblech, Alu
 Z1330X0
- Backblech, Email
 Z1340X2
- Brotbackstein
 Z1910X0
- Nachrüstset Clou
 Z1750X0
- Auflaufform
 Z1270X2
- Grillset-klein
 Z1240X2
- Katalyse-Set
 Z1908X0

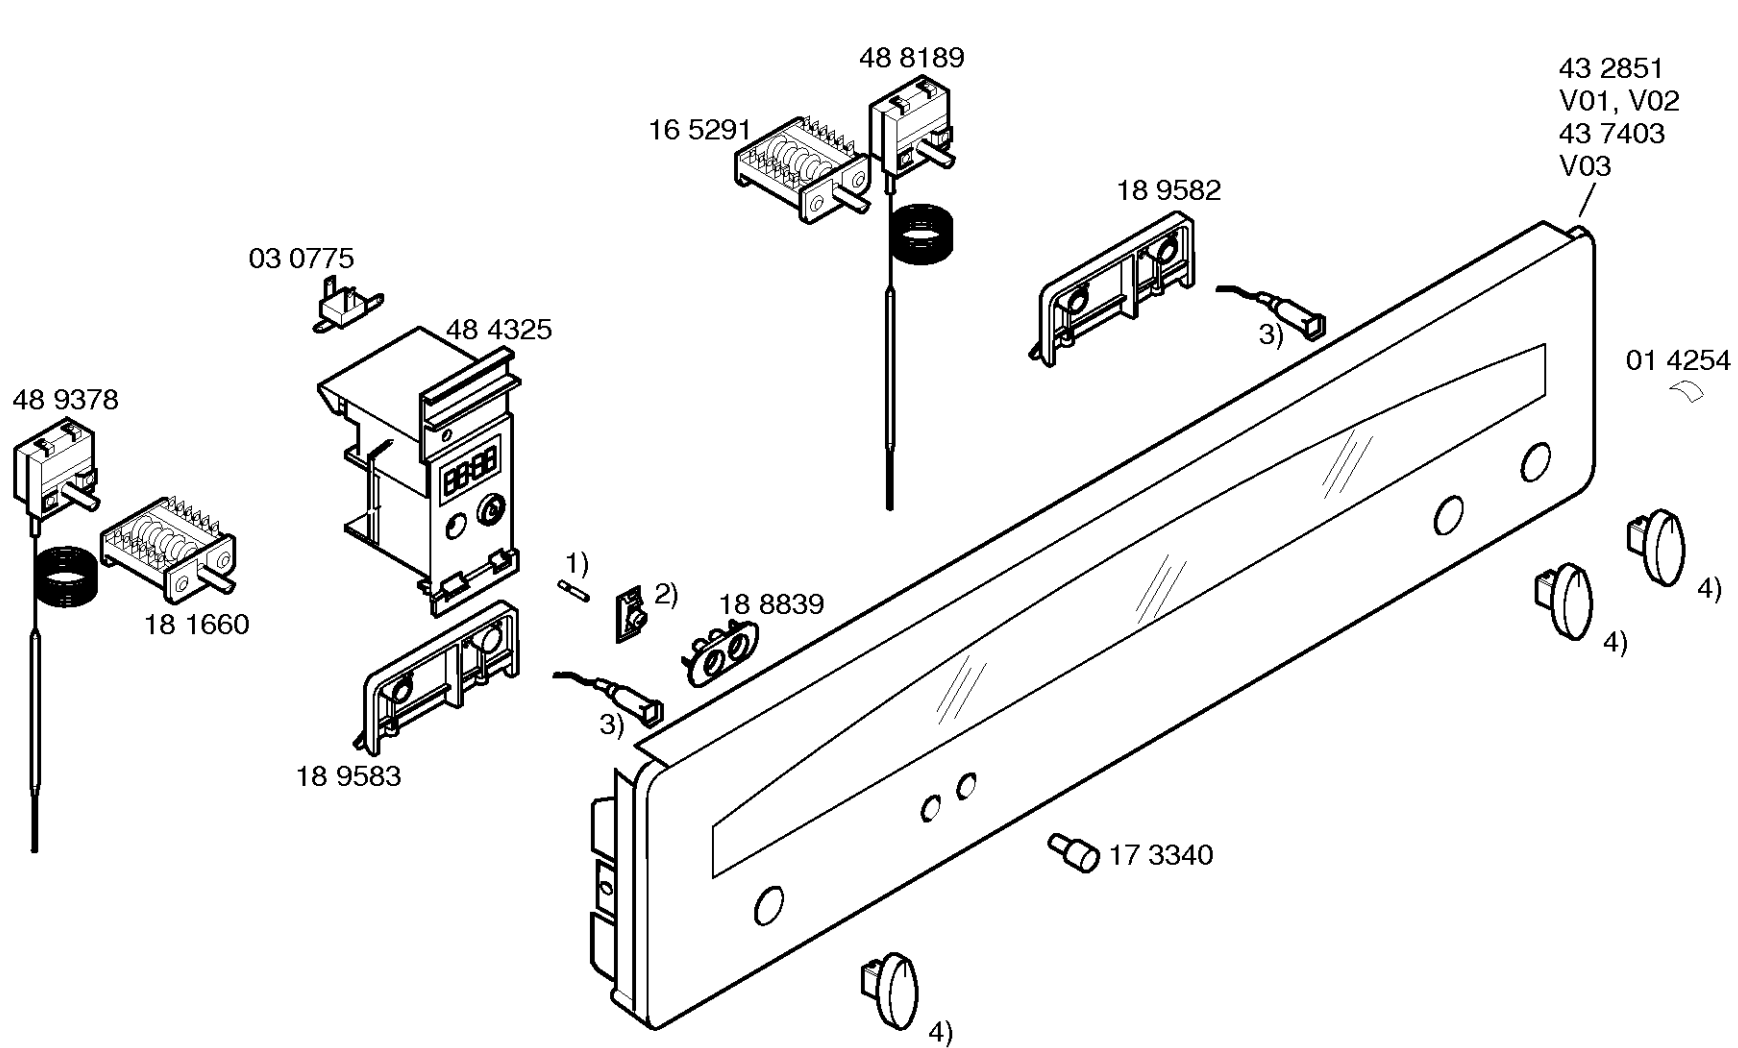


- 1) 16 8588
- 2) 18 8747
- 3) 15 9864
- 4) 18 9523

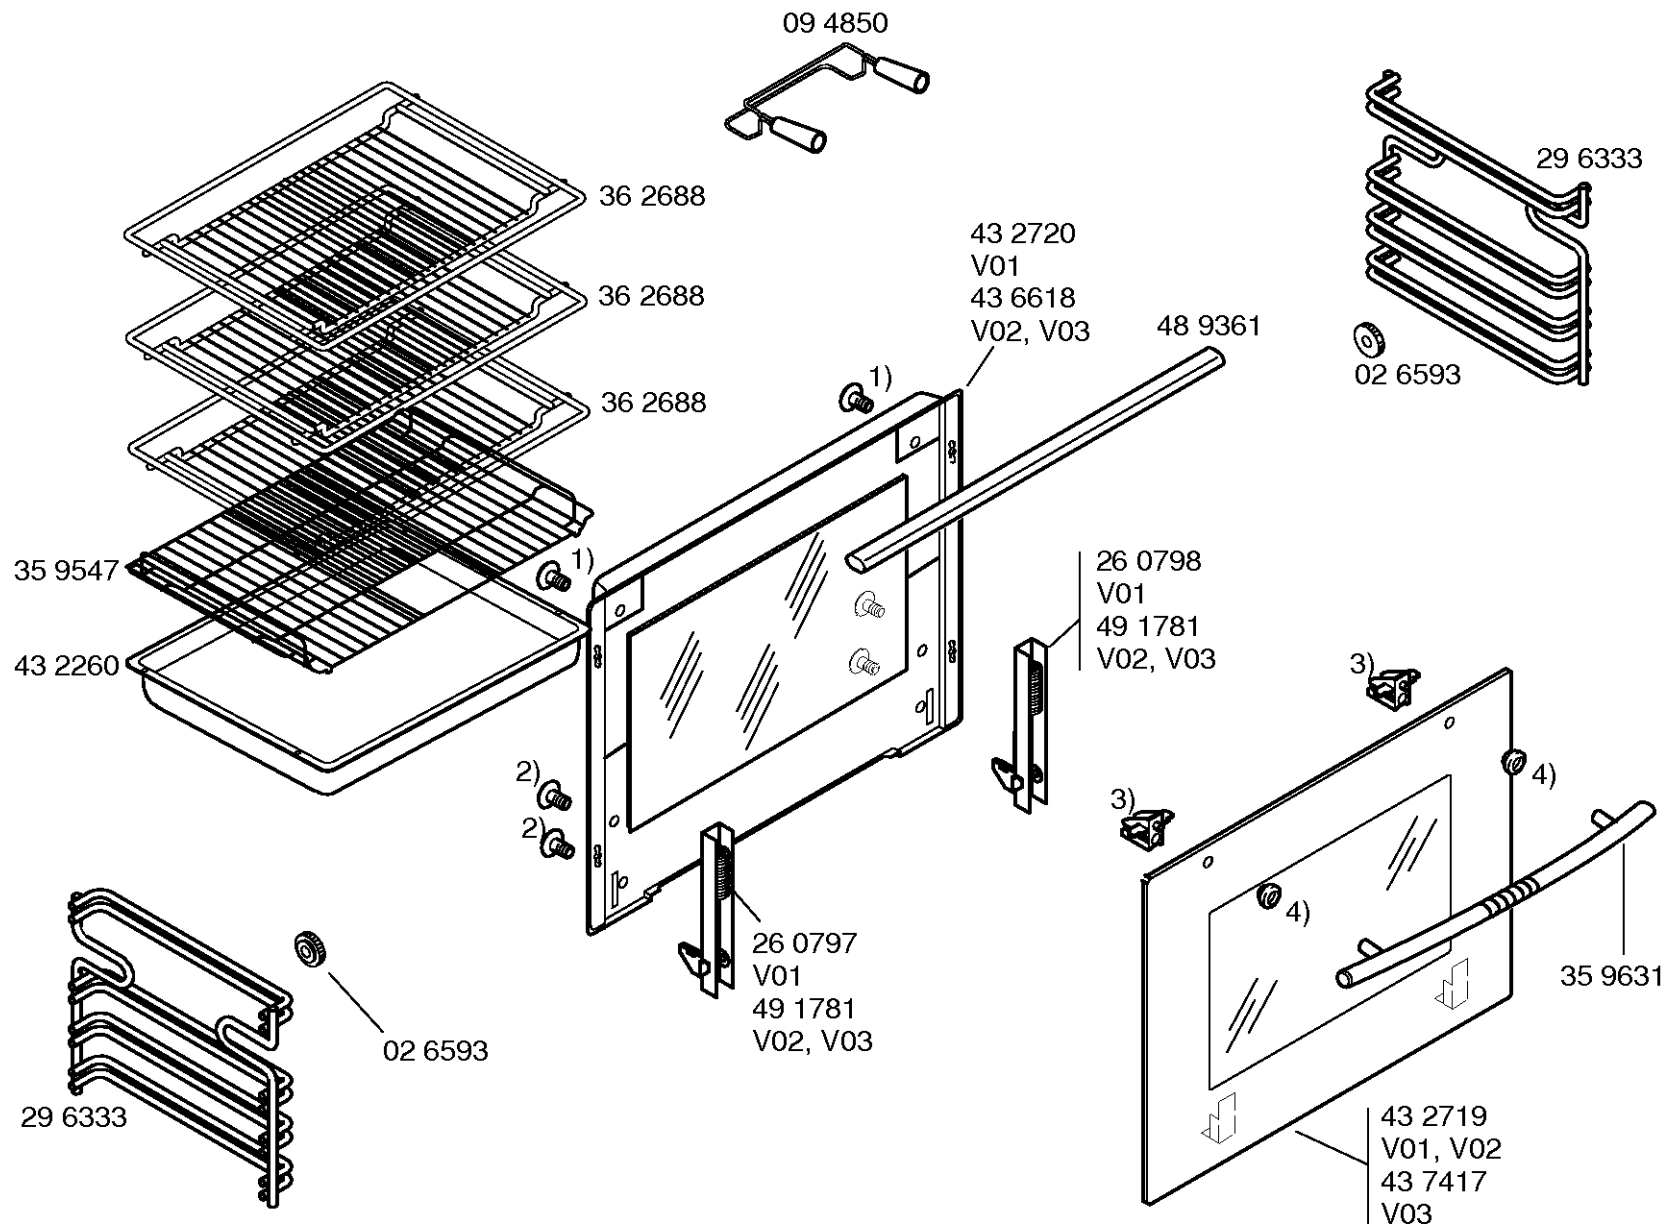

- 1) 15 4762
- 2) 15 4763
- V01
- 17 2646
- V02, V03
- 3) 16 2555
- 4) 17 2645

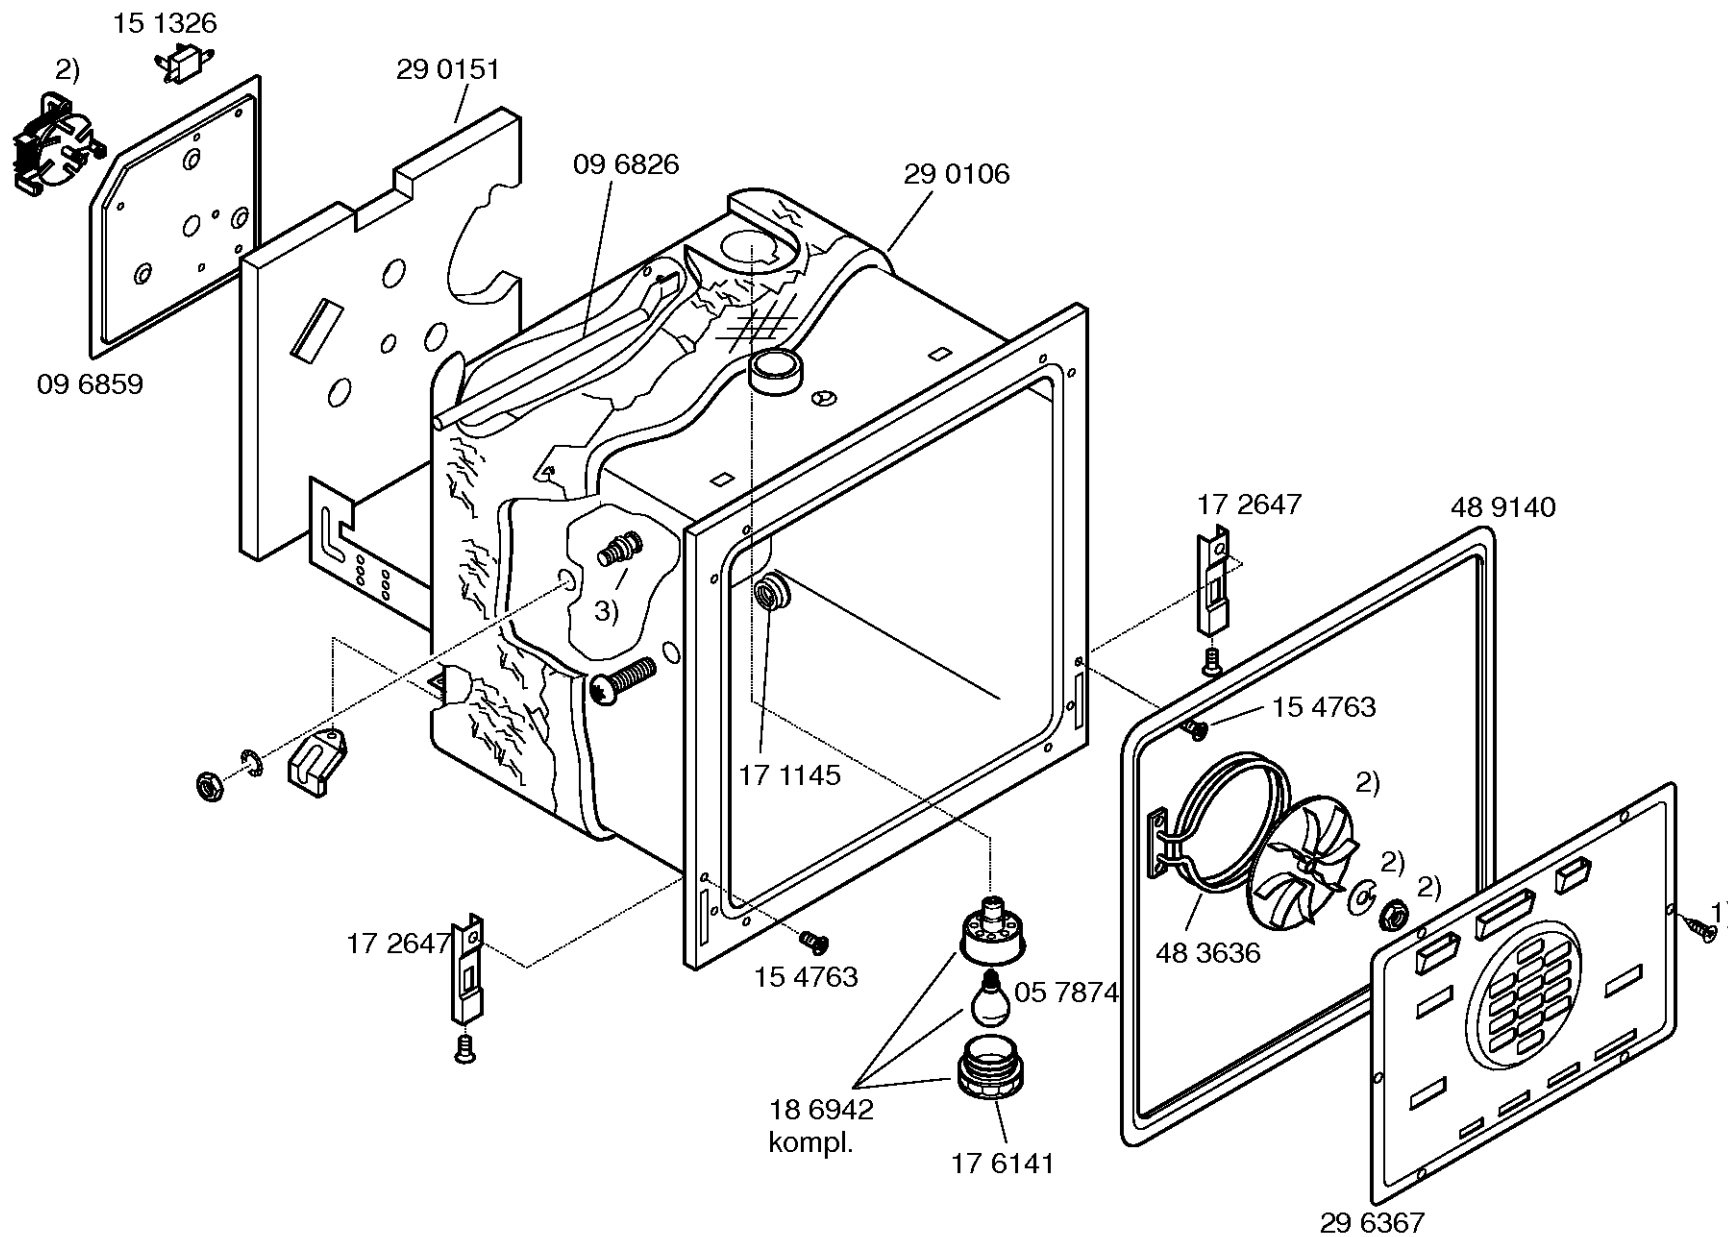

- 1) 41 8562
- 2) 09 6825
- 3) 17 1146

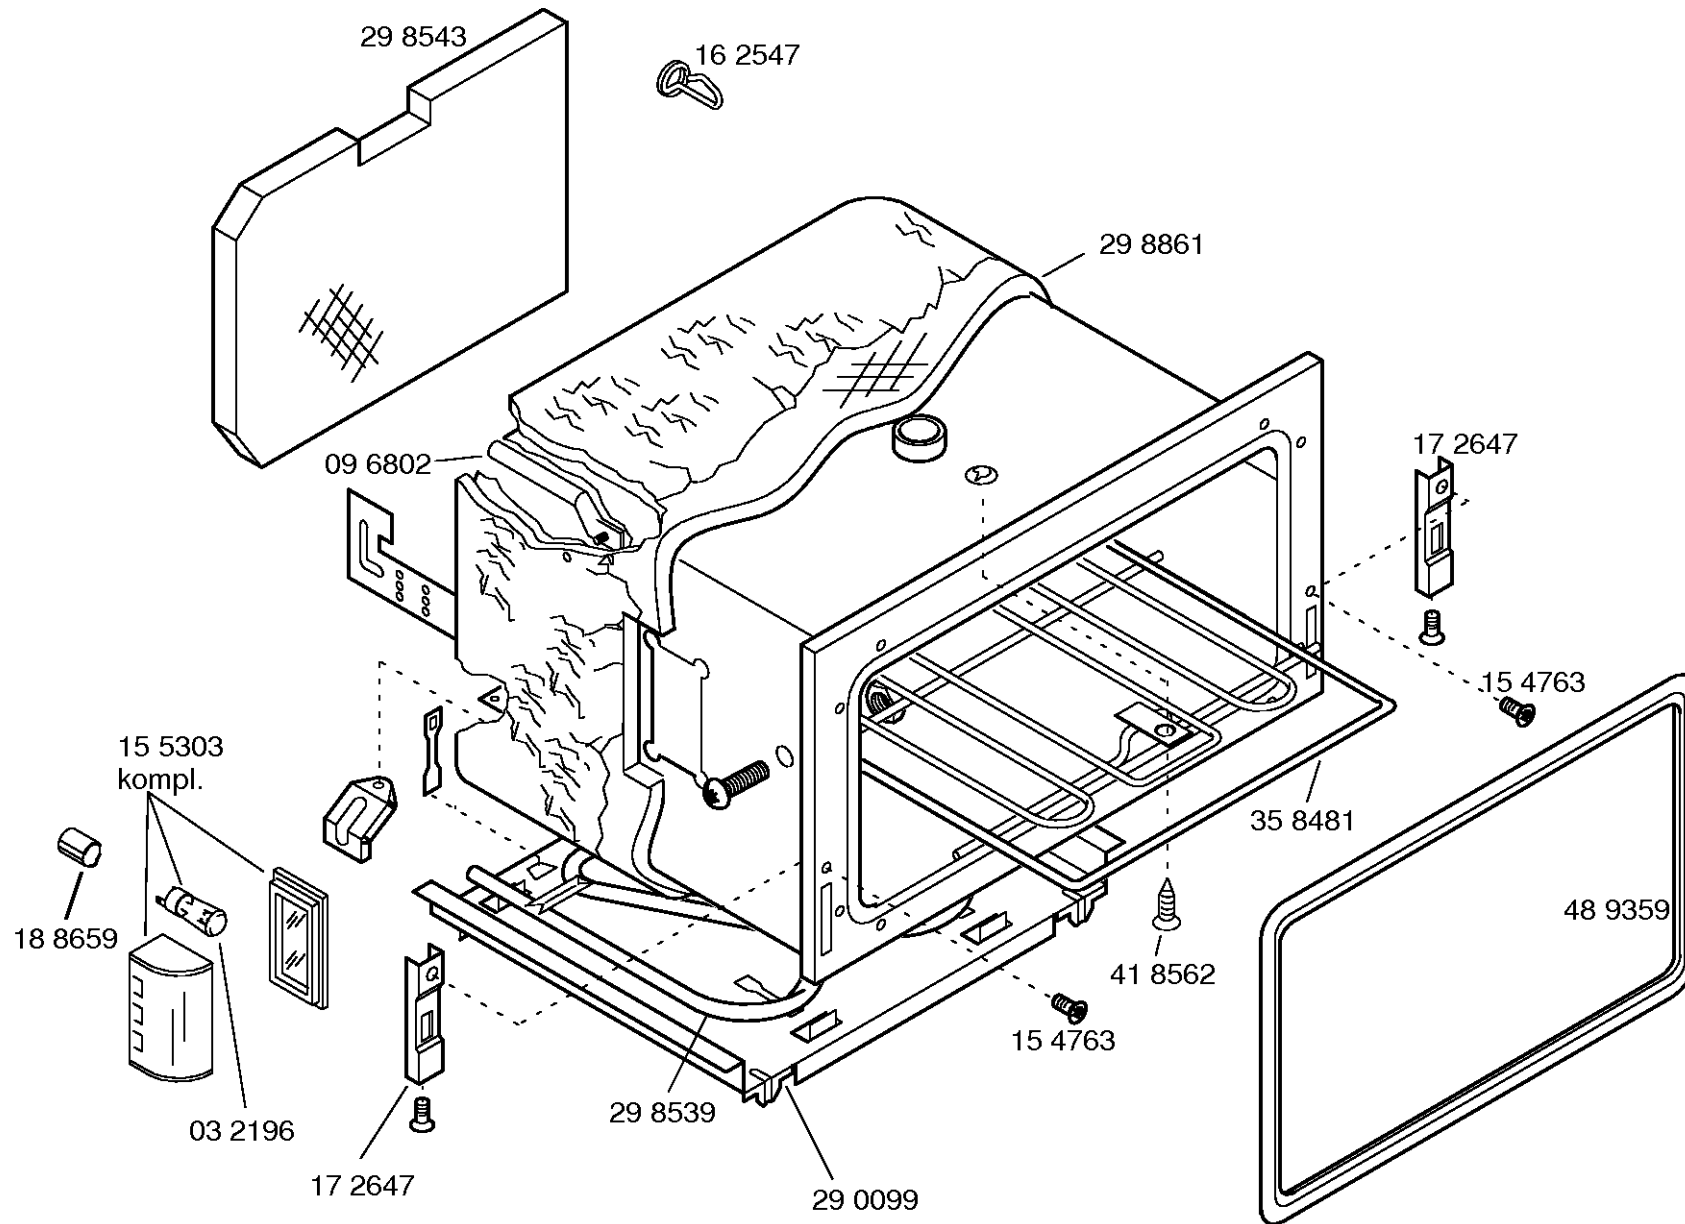

Position ID	Spare part number	Replacement	Description
0101	00585467		Instruction manual
0103	00481762		Cover
0104	00032484		Sleeve
0105	00030150	00607329	Limiter-temperature
0106	00030151		Fixture
0107	00030152		Resistor
0108	00432263		Strip
0109	00154742		Handle
0117	00170995		Sleeve
0122	00140210		Fan motor
0123	00155119		Terminal
0124	00023742		Screw
0204	00181660	00602724	Switch-selector
0206	00489378		Regulator-temperature
0216	00014254	00189303	Spring strip
0304	00094850	00055337	Handle
0307	00154762		Screw
0308	00172646		Screw
0309	00432260		Universal pan enamel
0311	00489361		Sealing
0312	00162555		Fixture
0314	00359547		Grille
0316	00172645		Disc
0401	00096825		Blower motor
0402	00483636	00499003	Heater-ring
0404	00057874		Oven Bulb - E14 (40W)
0405	00176141	00647309	Oven Lamp Glass Cover with Removal Tool
0408	00296367		Liner-catalytic
0410	00096826		Tube
0411	00489140		Seal-door
0412	00186942	00420775	Oven lamp with removal tool
0414	00172647		Bearing
0415	00171146		Bolt
0416	00171145		Fixing kit
0417	00154763		Screw
0418	00418562	00165917	Screw
0419	00418562	00165917	Screw

Position ID	Spare part number	Replacement	Description
0504	00154762		Screw
0505	00172646		Screw
0506	00489360	00489361	Sealing
0507	00296335		Liner-catalytic
0510	00418562	00165917	Screw
0511	00175955		Bearing block
0513	00298891		Liner-catalytic
0519	00172645		Disc
0603	00172647		Bearing
0604	00489359		Seal-door
0606	00162547		Clip
0607	00160916	00165917	Screw
0609	00155303		Lamp
0612	00154763		Screw
0208	00188747		Push button set