


Terra Vented&Condenser Sensor Controlled Dryers

1. Plug the electrical connection and be sure dryer is working properly. Turn on dryer. Press **"Start / Stop"** button for a while and restart program. Then cancel the programme by pressing **"Start / Stop"** button 3 sec. Turn off dryer.

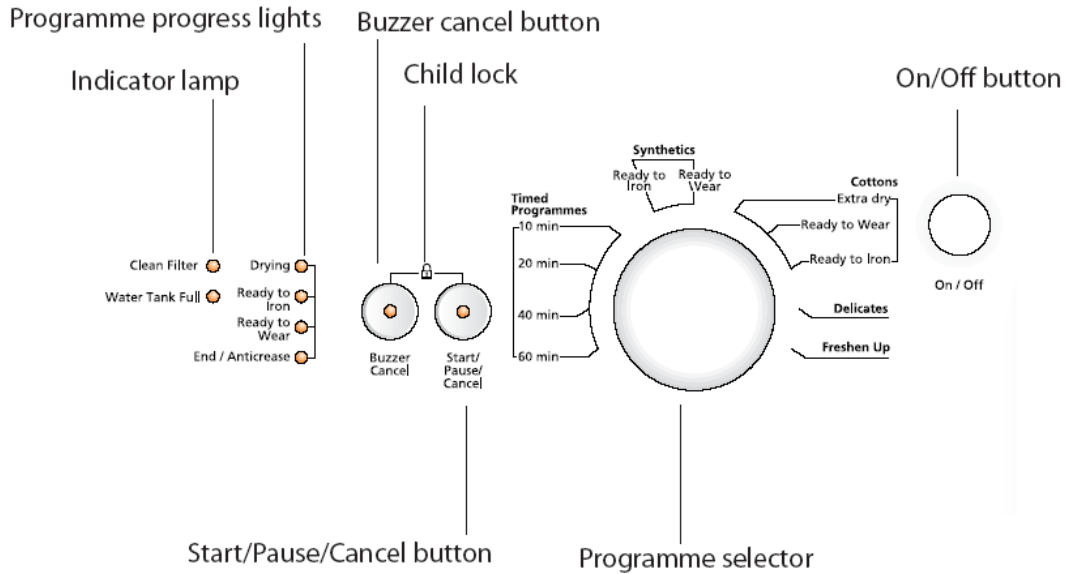

2. Adjust the rotary switch to the Delicate program clockwise direction after Cottons programmes.
3. By pressing Buzzer Cancel function button turn on dryer. Wait until **"Start / Stop"** led is blinking.
4. Press **"Start / Stop"** button to follow steps of service program:
 1. All led is blinking.
 2. Controlling leds. All the leds are on and blinking.
 3. Motor is turning anti-clockwise direction.
 4. While motor is turning first level of heater is on. 1400 W (7 A) and pump is on, if exist.
 5. While motor is turning second level of heater is on. 2000 W (9,6 A) and pump is on, if exist.
 6. Motor is stopping. Heaters are off.
 7. Motor is turning clockwise direction.

Continuing pressing **"Start / Stop"** repeats steps 1 to 7.